



**DIGITAL MUSIC PLAYER
MP3&WMA**

USER MANUAL

MP-F62

www.mpmaneuropa.com

Before connecting, operating or adjusting this product please read these instructions completely.

UP TILL 99 SONGS IN ONE DIRECTORY

YOUR MP-F62 ACCEPTS

UPTILL 99 SONGS IN ONE DIRECTORY

IF YOU WANT MORE THEN 99 SONGS,
STORE THEM IN A NEW DIRECTORY
IN PLAY MODE, YOU CAN CHANGE THE DIRECTORY
IN THE MENU.

DON'T FORGET: MAXIMUM 99 SONGS IN EACH DIRECTORY

1.1 The player characteristics

- ♣ Supports MP3 and WMA music format.
- ♣ Supports USB function
- ♣ Supports two lines of lyrics display synchronization
- ♣ Big display (128*32) LCD display
- ♣ Supports Firmware upgrade function
- ♣ Voice equalizer
- ♣ GUI (graphical user interfaces).


The box:

- | | |
|---------------------|------|
| (1) MP3 player | 1Pcs |
| (2) Stereo earphone | 1Pcs |
| (3) CD ROM | 1Pcs |
| (4) Manual | 1Pcs |
| (5) USB cable | 1Pcs |

PC needs

- (1) Pentium 100 MHz or faster
- (2) Windows 98/2000/ ME/XP
- (3) USB port
- (4) CD- ROM driver
- (5) 15MB of free space on harddisk
- (6) 32 MB RAM

1.2 The player appearance interface

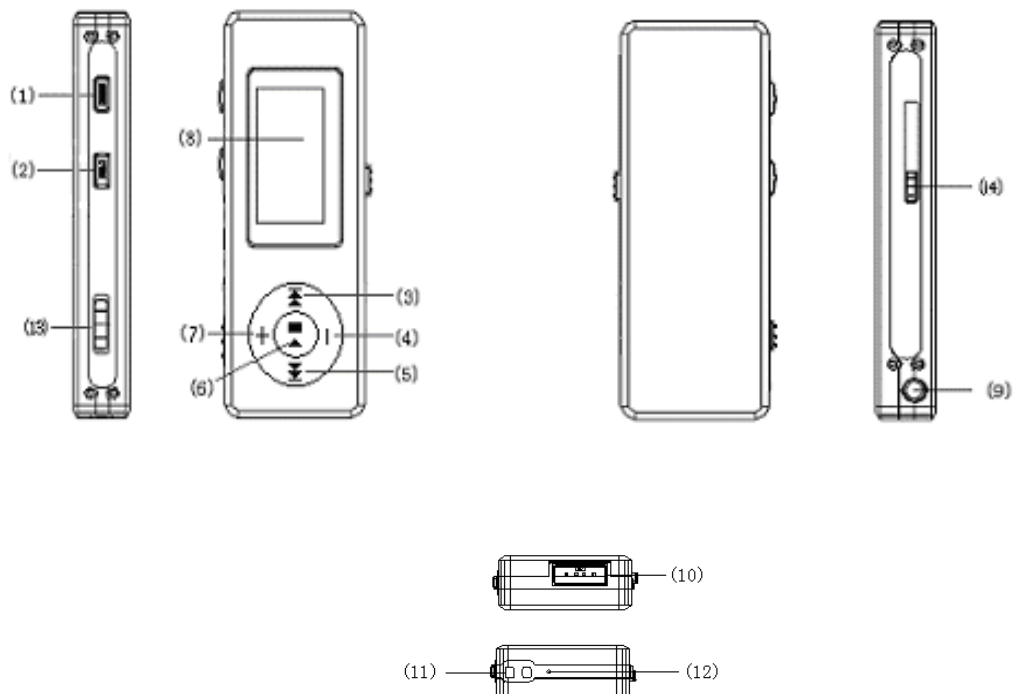


1.3 Figure & Keys

- 1) REC,
- 2) Menu,
- 3) F.FWD / Next,
- 4) Vol - ,
- 5) F.REV / Previous,
- 6) Play/Pause,
- 7) Vol+ ,
- 8) LCD,
- 9) Earphone,
- 10) USB Port,
- 11) Cord Hole,
- 12) Mic,
- 13) Power ON/OFF,
- 14) Push button of USB Port,

1.4 Display

This player adopts big LCD of 128*32 lattice

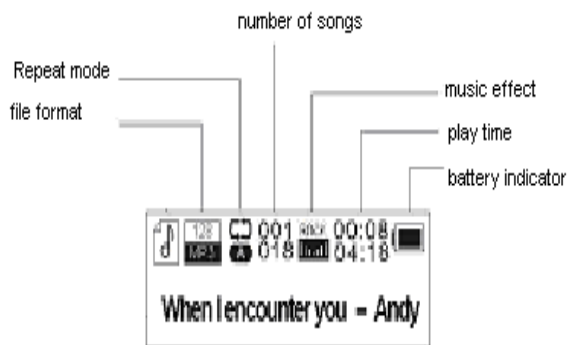

1.5 Battery

The screen shows a battery indicator with nine levels.

The battery is full when the battery voltage is 1.5V.

The battery indicator will be empty when the battery is used up. At that time, the player should be charged with an external charger(optional) or with the USB connection on your PC

2 Operating instruction

2.1 Turning on/off the MP3 player

Slide switch (13) to the right. The LCD display will light up.

Slide switch (13) to the left. The MP3 player will shut off.

2.2 Main menu

Press the “Menu” button for several seconds, from any point in the menu, and the player returns automatically back to the main menu.

Five options:

- 1) MUSIC
- 2) RECORD
- 3) VOICE
- 4) SETTING
- 5) EXIT

	Music
	Record
	Voice
	Setting
	Exit

You can switch between options by press the “F.FWD” or “F.REV” button “▶▶” or “◀◀” . Then press shortly on the “Menu” button to enter the submenu or [confirm](#) a function.

2.3 “Music” mode

Select “Music” mode in the main menu.

2.3.1 Stop submenu

Press "Menu" button once to enter the stop submenu.

Four options:

- Local Folder
- Delete file
- Delete all
- Exit

2.3.1.1 Local folder



Local folder

Files can be stored in different folders.

Create new folders in Windows explorer when MP3 is connected.

Open “external drive”.

Create new folder

- Press "Menu" button to open Local folder
- Press “F.FWD” or “F.REV” button to select the catalog
- Press “Menu” button to confirm

2.3.1.2 Delete file

2.3.1.3 Delete all

Deletes all files of the current catalog

2.3.2 Play submenu

During playback, press "Menu "button to enter "Play submenu “:

Six options:

- Repeat
- Equalizer
- Tempo Rate
- Replay
- Replay times
- Replay gap
- Exit

2.3.2.1 Repeat

Normal	All songs are played once
Repeat One	Repeats the current song
Folder	Plays all the music of a specific folder
Repeat Folder	Repeats the music of a specific folder
Repeat All	Repeats all the music.
Random	Plays music at random.
Intro	First 10 seconds of each song is played.

2.3.2.2 Equalizer

Seven options:

- Natural
- Rock
- Pop
- Classic
- Soft
- Jazz
- DBB

2.3.2.3 Tempo Rate



The music can be played faster or slower (only with MP3 files)
Change the rate by Press “F.FWD” or “F.REV” button.

2.3.2.4 Replay mode

A-B replay

When replay mode is selected, the A-B icon is visible .

Select the start point A (flashing) by press "F.FWD" button.

Select the end point B (flashing) by press "F.FWD" button.

The A-B section will be repeated continuously

Press "Menu" button to return to normal playback

-During replay, the play-rate can be changed with VOL+ or VOL-".

- Adding your voice to the A-B section

During playback of the A-B section, by press "F.FWD" button

The microphone icon  appears and your voice is recorded.

Press "Menu" button again to stop the recording.

The A-B section + the voice recording will be repeated

2.3.2.5 Replay times

Here you are able to choose how many times (1-10) the A-B section will be repeated.

2.3.2.6 Replay gap

Choose the time (1-10 sec) between each A-B section.

2.3.3 Lyrics

This MP3 player supports "*.lrc" Lyric files

Lyrics can be downloaded from the Internet.

Make sure that lrc-file has the same name as the corresponding song.

For example:

If the song name is "Yesterday.mp3", the lyric file should be named "Yesterday.lrc"

MP3 and LRC file must be stored in the same folder!

 No Lyric


 Lyric included

Attention: A lyric cannot be larger then 500 words.

2.4 Record mode

-Select "Record mode" in the main menu.

The unit can store 99 recordings in each folder.



- Press "PLAY" button to start recording.
- Press "PLAY" button again to pause the recording (Time flashes).
- Press "PLAY" again to continue recording.
- Press and hold the "PLAY" button to stop recording.

2.4.1 Record submenu

In the Record mode, press menu button once


3 options:

- Local folder
- REC type
- Exit

2.4.1.1 Local folder

cfr 2.3.1.1

2.4.1.2 REC type



Four options:

- “Fine REC”: high quality recording, wav format, good quality.
- “Long REC”: lower quality recording, act format, uses less space
- “Fine VOR”: wav format
- “Long VOR”: act format

When using “VOR recording”, the player enters into the state of “pause recording” if no sound is detected by the microphone. Recording starts again when sound is detected.

2.5 Voice mode

In this mode you can listen to the recordings created in “Record mode”
Select in the main menu "Voice mode ".

2.5.1 Voice stop submenu

When playback is stopped, press “Menu” button to enter the Voice submenu.

2.5.1.1 Local folder (Stop submenu)

cfr 2.3.1.1

2.5.1.2 Delete file (Stop submenu)

2.5.1.3 Delete all (Stop submenu)

Deletes all files of the current catalog

2.5.2 Voice play submenu

During playback, press “Menu” button to enter the Voice play submenu.

- 4 options:
- Repeat
 - Tempo rate
 - Replay
 - Exit

Those options are similar to the music play submenu

2.6 Systems set up

Select “System” in the main menu

- Record Time
- Backlight
- Language
- Power off
- Replay mode
- Contrast
- Memory info.
- Firmware version
- Exit

2.6.1 Record Time

Enter here the correct date and time.

Press VOL+ button and the year- number will start flashing.

Change the year number by Press “F.FWD” or “F.REV” button

Press again VOL+ button and the months will start flashing flashing....



When date and time are correct, press menu button to confirm.

2.6.2 Backlight

Adjust the backlight intensity between 0 and 30,

by pressing “F.FWD” or “F.REV” button

Press “Menu” Button to confirm

2.6.3 Language

Change the language by pressing “F.FWD” or “F.REV” button

Press Menu button to confirm.

2.6.4 Power off

- Off time

With this function the device will automatically shut down after a preset time. (0-60sec), when no button is touched and music is not playing.

If time is set at 0 seconds, the function is cancelled.

- Sleeping mode

With this function the device will always shut down after a preset time (0-120 min).

If time is set at 0, the function is cancelled.

When the device is powered off, sleeping mode is set at 0.

2.6.5 Replay

Manual replay or auto replay

2.6.6 Contrast

Change contrast by pressing “F.FWD” or “F.REV” button

Press “Menu” button to confirm.

2.6.8 Memory info

Gives a percentage of the used memory compared to the total memory size

2.6.9 Firmware version

Info about software version

2.7 USB disk use


The unit functions as a standard USB disk with most operating systems.

- Windows98 (driver needed)

- Above Windows 2000 (no need to install driver)

When connected with PC (battery not needed), the device can be in 3 different modes

- “wait” mode



- “download data” mode



- “send data” mode



Attention: Removing the device from the PC during data transfer can cause severe damage to the device!

2.8 Specification

(1) <i>FLASH Memory</i>	128MB, 256MB, 512MB, 1GB
(2) <i>music format.</i>	MP3, WMA, WAV
(3) <i>liquid crystal display monitor</i>	128× 32 lattices
(4) <i>Display Color</i>	One color
(5) <i>Languages</i>	English, French, Italian, German, Spanish, Swedish, Dutch, Czech, Portugal.
(6) <i>Power supply</i>	3.8v Rechargeable Lithium battery
(7) <i>USB2.0</i>	(Read 1033K Byte/S, Write 955K Byte/S)
(8) <i>recording</i>	WAV (32K bps), ACT (8K bps)
(9) <i>frequency response</i>	20Hz~20KHz
(10) <i>distortion</i>	< 0.1%
(11) <i>baud rate</i>	> 4Mbps
(12) <i>weight</i>	35g
(13) <i>size</i>	80mm x 31mm x 12mm (L x W x D)

2.9 Troubleshooting

If for any reason your player is blocked, you can reset the firmware. You just have to switch it off and back on. Reset is automatic at startup.

FOR MORE INFORMATION DO NOT HESITATE TO VISIT OUR WEBSITE
www.mpmaneuropa.com